

Assembly and Installation Instructions for Model


500830DW

CAUTION - RISK OF FIRE

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

Warning please make sure the electrical breaker is shut off before commencing with this installation

This fixture is certified for wall mounting only and is suitable for Wet locations

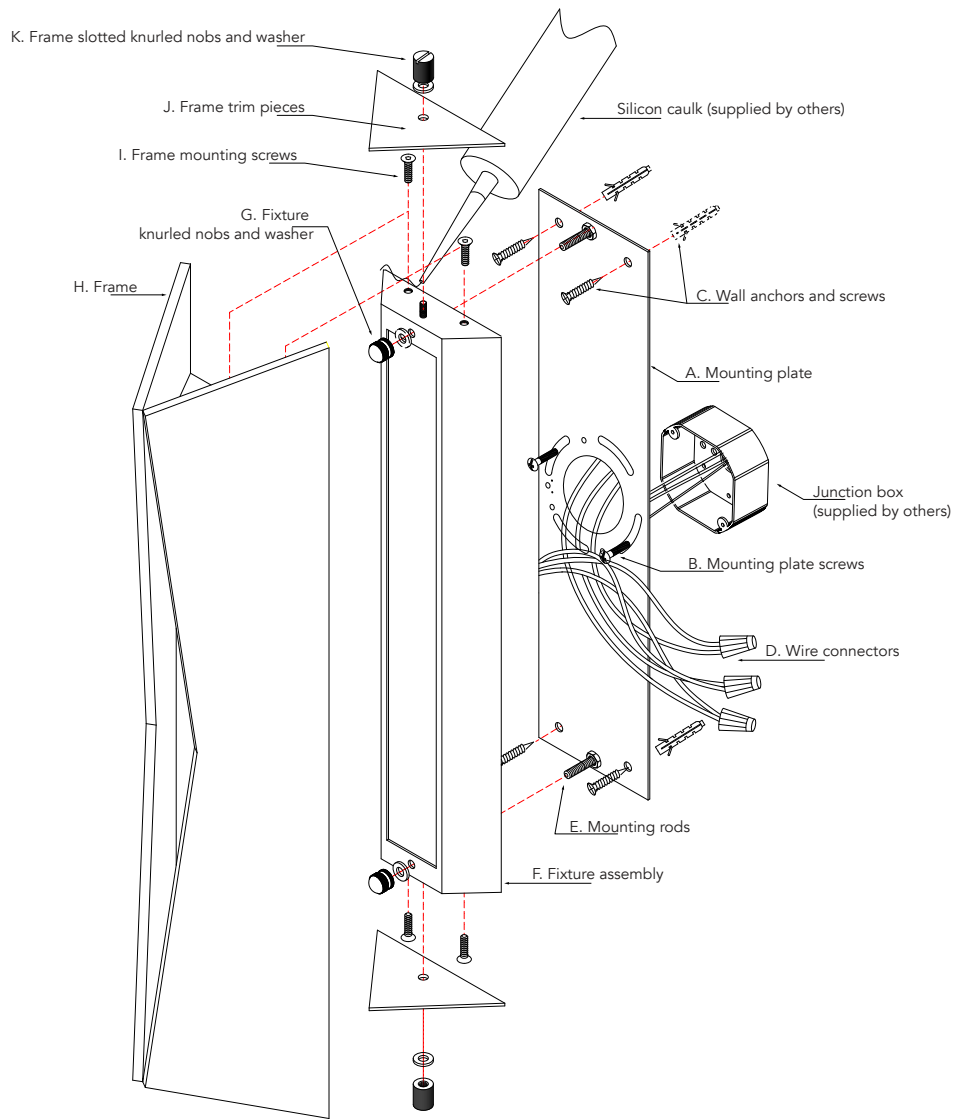

Package Contents		
Part	Description	Qty
A	Mounting plate	1
B	Mounting plate screws	2
C	Wall anchors and screws	4
D	Wire connectors	3
F	Fixture assembly	1
G	Fixture knurled knobs and washers	2
H	Frame	1
I	Frame mounting screws	4
J	Frame trim pieces	2
K	Frame slotted knurled knob and washers	2

Installing the fixture *please ensure the electrical breaker is switched off before commencing*

- Loosely attach the Mounting plate (**A**) to the Junction box with supplied Mounting plate screws (**B**) and make sure the bracket is level, using a pencil mark the two holes for the Wall anchors (**C**), remove the Mounting bracket, drill the holes for the Wall anchors and re-attach the Mounting bracket and secure with the Mounting bracket screws and Wall anchor screws.
- Attach the wires from the Fixture assembly (**F**) to the Supply wires using the supplied Electrical wire connectors (**D**). White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the Electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- Insert the Fixture assembly (**F**) to the Mounting plate Mounting rods (**E**) and secure with Fixture knurled nobs and washers (**G**).
- Caulk with suitable Silicon Caulking (supplied by others) around the fixture to ensure no water can penetrate.
- Attach the Frame to the Fixture assembly using the supplied Frame mounting screws install the Frame trim pieces and secure with Frame slotted knurled knobs and washers.
- Re-connect the electrical breaker and the fixture is now ready for years of trouble free use.