

## **Neoteric Lighting Design**



Assembly and Installation Instructions for Model's

## 30099FM


## **CAUTION - RISK OF FIRE**

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

**Warning** please make sure the electrical breaker is shut off before commencing with this installation Read and familiarize yourself with these instructions before commencing

This fixture is certified for wall mounting only and is suitable for Wet locations. Dimmable with CL type dimmer The fixture uses a 120v A/C LED panel, no driver required

Package Contents		
Part	Description	Qty
Α	Fixture mounting bracket	1
В	Mounting bracket screws	2
С	Fixture assembly	1
D	Wire connectors	3

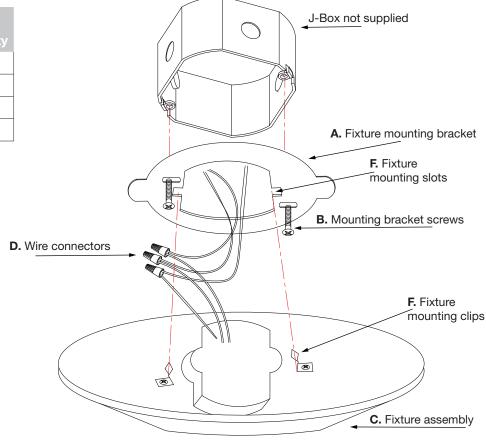

## Installing the fixture please ensure the electrical breaker is switched off before commencing

- 1 Attach the supplied Mounting Bracket (A) with the two supplied Mounting bracket screws (B) to the Junction-Box.
- Connect the supply wires to the fixture wires using the supplied electrical wire connectors **(D)**. White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- 3 Attach the fixture assembly (C) to the mounting bracket (A) by inserting the two Fixture mounting clips (F) into the slots on the Mounting bracket.
- 4 Switch on the electrical breaker and your new fixture is ready for many years of trouble free use

