


Assembly and Installation Instructions for Model's

10130PN

CAUTION - RISK OF FIRE

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

Warning please make sure the electrical breaker is shut off before commencing with this installation

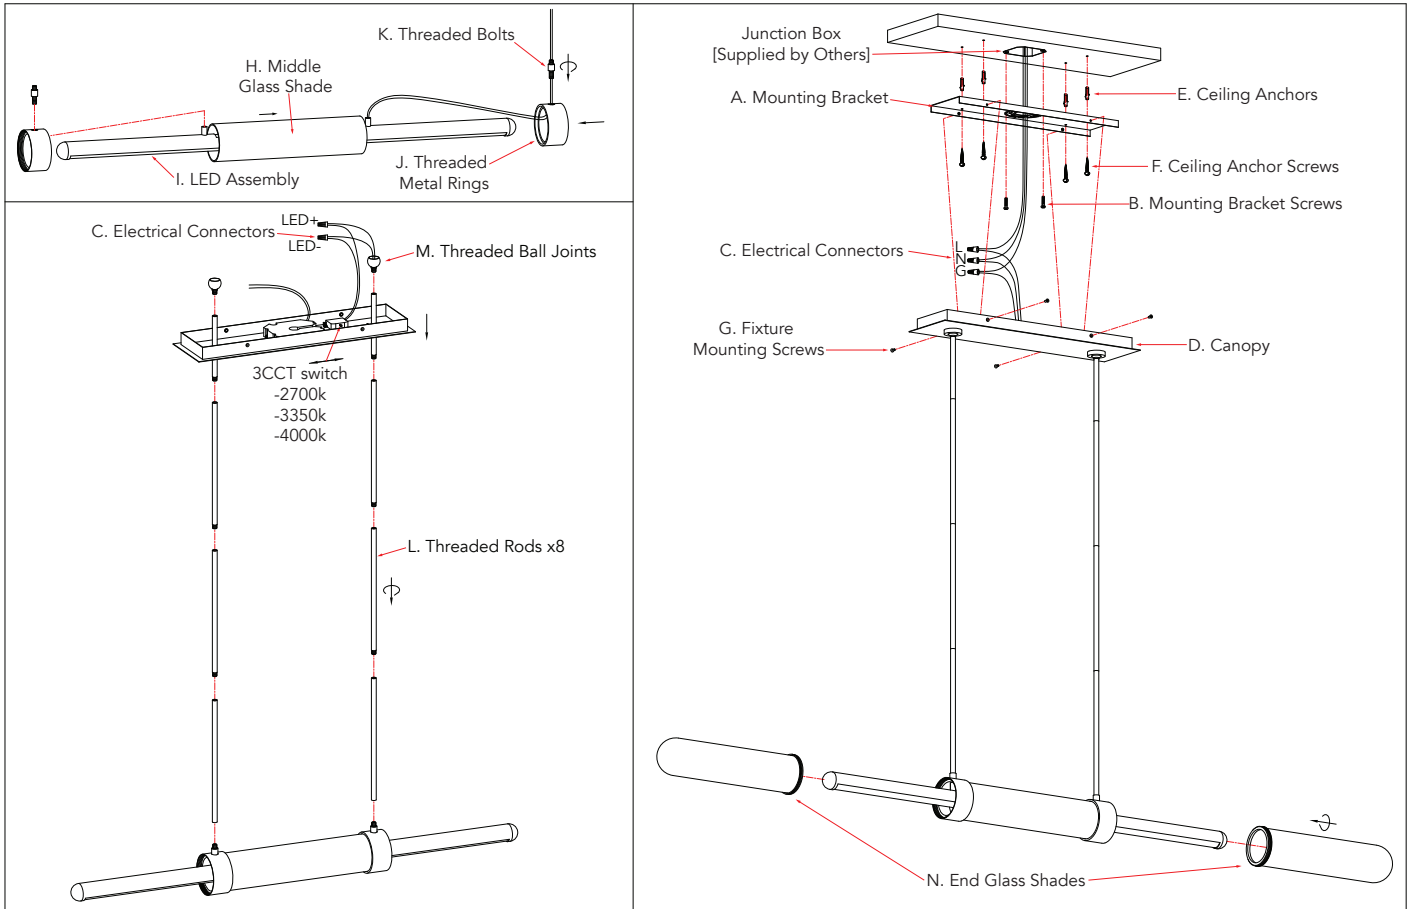

Package Contents

Part	Description	
A	Mounting bracket	1
B	Mounting bracket screws	2
C	Electrical Connectors	5
D	Canopy	1
E	Ceiling anchors	4
F	Ceiling anchor screws	4
G	Fixture mounting screws	4
H	Middle glass shade	1
I	LED assembly	1
J	Threaded metal rings	2
K	Threaded bolts	2
L	Threaded rods	8
M	Threaded ball joints	2
N	End glass shades	2

Installing the fixture

please ensure the electrical breaker is in the Off position before commencing

- 1 Set the Kelvin temperature [2700k, 3350k or 4000k] using the switch in the Canopy (**D**).
- 2 Slide the Middle glass shade (**H**) over the LED assembly (**I**). Screw the Threaded metal rings (**J**) onto the ends of the middle glass. Secure the Threaded bolts (**K**) onto the top of the Metal rings.
- 3 Screw together the Threaded rods (**L**) and attach them to the Threaded bolts (**K**). Secure them to the Canopy (**D**) by threading them through the two holes in the Canopy and screwing on the Threaded ball joints (**M**)
- 4 Loosely secure the Mounting bracket (**A**) to the Junction box [Supplied by Others] using the Mounting bracket screws (**B**). Mark the ceiling where the Ceiling anchors (**E**) will be installed. Remove the Mounting bracket.
- 5 Install the Ceiling anchors (**E**) in their marked positions and secure the Mounting bracket (**A**) to the Junction box [Supplied by Others] using the Mounting bracket screws (**B**). Secure the Mounting bracket to the ceiling by inserting the Ceiling anchor screws (**F**) into the Ceiling anchors.
- 6 Connect the Fixture wires to the LED Driver wires using the supplied electrical wire connectors (**C**). Connect the Driver wires to the Supply wires. White driver wire to the White supply wire, Black driver wire to Black supply wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- 7 Attach the Canopy (**D**) onto the Mounting bracket (**A**) using Fixture mounting screws (**G**).
- 8 Screw the End glass shades (**N**) onto both ends of the Fixture assembly.
- 9 Switch on the electrical breaker switch and your new fixture is ready for many years of trouble free use.