


Assembly and Installation Instructions for Model's

10218PN

CAUTION - RISK OF FIRE

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

Warning please make sure the electrical breaker is shut off before commencing with this installation

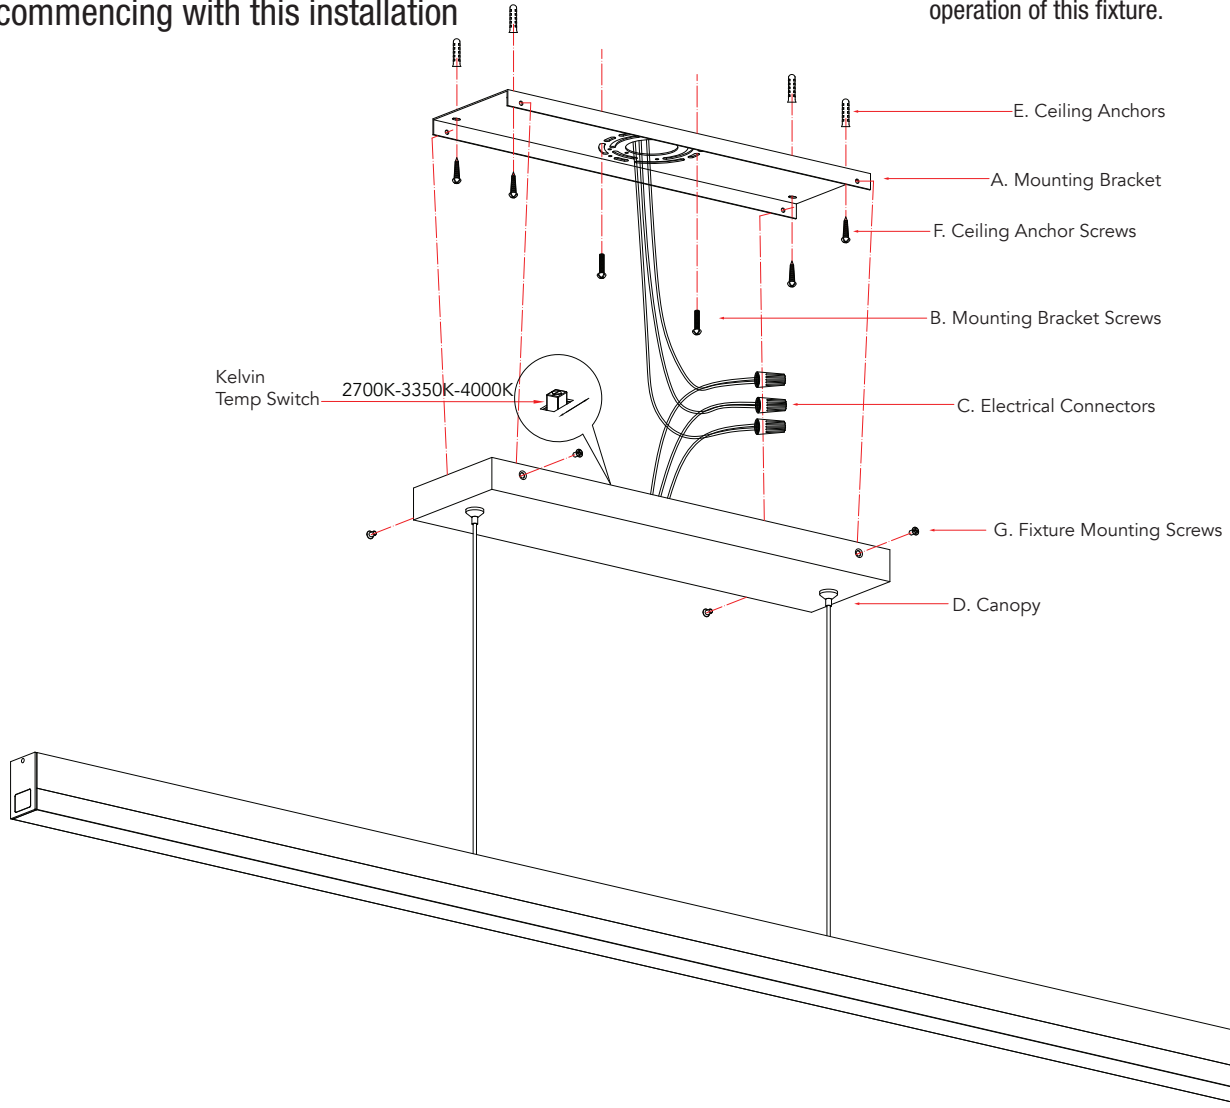

Package Contents

Part	Description	
A	Mounting bracket	1
B	Mounting bracket screws	2
C	Electrical Connectors	3
D	Canopy	1
E	Ceiling anchors	4
F	Ceiling anchor screws	4
G	Fixture mounting screws	4

Installing the fixture

please ensure the electrical breaker is in the Off position before commencing

- Loosely attach the Mounting brackets (**A**) to the Junction Box [Supplied by Others] using the Mounting bracket screws (**B**) and mark where the Ceiling anchors (**E**) will be installed. Remove the Mounting bracket.
- Install the Ceiling anchors (**E**) into their marked spots. Attach the Mounting brackets (**A**) to the Junction Box [Supplied by Others] using the Mounting bracket screws (**B**). Secure the Mounting bracket to the Ceiling by inserting the Ceiling anchor screws (**F**) into the Ceiling anchors.
- Connect the Fixture wires to the Supply wires using the supplied electrical wire connectors (**C**). White fixture wire to the White supply wire, Black fixture wire to Black supply wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- Set the desired Kelvin Temperature using the switch provided, [2700k, 3350k, 4000k]
- Secure the Canopy (**D**) to the Mounting bracket (**A**) using the Fixture mounting screws (**G**) provided.
- Switch on the electrical breaker switch and your new fixture is ready for many years of trouble free use.